

Low Voltage Battery Protection

Cut out
10.4 volts

Cut in
11.7 volts

The voltage must be measured with a meter, at the module on the fridge, while it is running or trying to start.

Minimum battery voltage measured at the battery should be 12.4 volts